AD-A056 244

RADFORM RECOVERY AND ISOLATION STUDIES.(U)


MAY 78 R A MUNDY, E E GILBERT

RAD-280-10

ARLCD-TR-78027

NL

ARLCD-

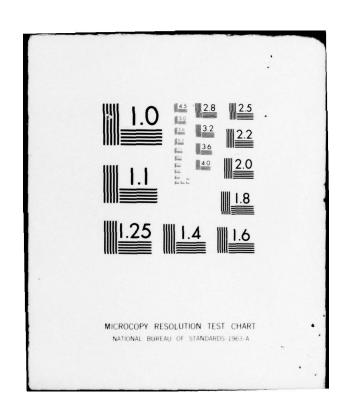



AD

AD-E400 164

TECHNICAL REPORT ARLCD-TR-78027

NITROFORM RECOVERY AND ISOLATION STUDIES

DOC FILE COPY

R. A. MUNDY
RADFORD ARMY AMMUNITION PLANT

E. E. GILBERT
ARRADCOM PROJECT ENGINEER



MAY 1978



US ARMY ARMAMENT RESEARCH AND DEVELOPMENT COMMAND LARGE CALIBER
WEAPON SYSTEMS LABORATORY
DOVER, NEW JERSEY

APPROVED FOR PUBLIC RELEASE: DISTRIBUTION UNLIMITED.

18 06 13 088

The findings in this report are not to be construed as an official Department of the Army Position.

Destroy this report when no longer needed. Do not return to the originator.

The citation in this report of the names of commercial firms or commercially available products or services does not constitute official endorsement or approval of such commercial firms, products, or services by the US Government.

Unclassified
SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)


REPORT DOCUMENTATION PAGE	READ INSTRUCTIONS BEFORE COMPLETING FORM
1. REPORT NUMBER 2. GOVT ACCESSION NO	3. RECIPIENT'S CATALOG NUMBER
Technical Report ARLCD-TR-78027	P)
4. TITLE (and Subtitle)	5. TYPE OF REPORT & PERIOD COVERE
	Final Report
NITROFORM RECOVERY AND ISOLATION STUDIES	December 1975 - January 19
	B. PERFORMING ORG. REPORT NUMBER
	PE-557 (RAD 240.10)
7. AUTHOR(*)	8. CONTRACT OR GRANT NUMBER(*)
R. A. Mundy, Radford Army Ammunition Plant E.E./Gilbert, Project Engineer, ARRADCOM	14 RAD-240.16, P
PERFORMING ORGANIZATION NAME AND ADDRESS	10. PROGRAM ELEMENT, PROJECT, TASK AREA & WORK UNIT NUMBERS
Radford Army Ammunition Plant	17/
Hercules Incorporated	DA Project No. 1T7627200048
Radford, Virginia 24141	Work Unit W-5
1. CONTROLLING OFFICE NAME AND ADDRESS	12. REPORT DATE
US Army Armament Research & Development Command	11 May 1978
ATTN: DRDAR-TSS	13: NUMBER OF PAGES
Dover, NJ 07801	69
14. MONITORING AGENCY NAME & ADDRESS(If different from Controlling Office)	15. SECURITY CLASS. (of this report)
Energetic Materials Division, LCWSL	Unclassified
US Army Armament Research & Development Command	TEA DECLASSIFICATION/DOWNGRADING
Dover, NJ 07801	152. DECLASSIFICATION/DOWNGRADING
(18) ARLICD, SBIE! (19	AD-E400164
17. DISTRIBUTION STATEMENT (of the ebetract entered in Block 20, if different for	om Report)
This project was funded by Edgewood Arsenal, Abe	rdeen, MD 21010
This project was funded by Edgewood Arsenal, Aber 19. KEY WORDS (Continue on reverse side if necessary and identify by block number Sodium Nitroform Tetranitromethane	
This project was funded by Edgewood Arsenal, Aber 19. KEY WORDS (Continue on reverse side if necessary and identify by block number Sodium Nitroform Tetranitromethane Nitroform	
This project was funded by Edgewood Arsenal, Abe 9. KEY WORDS (Continue on reverse side if necessary and identify by block numbers Sodium Nitroform Tetranitromethane	
This project was funded by Edgewood Arsenal, Abe 9. KEY WORDS (Continue on reverse side II necessary and identify by block numbers Sodium Nitroform Tetranitromethane Nitroform	o)

Unclassified
SECURITY CLASSIFICATION OF THIS PAGE (When Data Entered)

SUMMARY

Although TNM can be removed from a gas stream with sodium sulfite (Na_2SO_3) for pollution abatement, this approach does not produce NF for recovery in any appreciable quantity. The processes investigated are capable of TNT tail gas fume abatement as well as providing a source for NF, a material used in the manufacture of high energy propellants.

Under this study, short and long term scrubbing runs were conducted using a bench-scale scrubber. The scrubbing medium was an aqueous solution of either sodium hydroxide (NaOH) or Na₂CO₃ with stabilized H₂O₂. The results of these investigations showed that scrubbing will effectively reduce TNM from an air stream containing 750 to 1000 ppm to an exit level of considerably less than 100 ppm by converting it to soluble sodium nitroform (SNF). The SNF column scrubbing concentration can be increased to approximately 5-6 percent before column performance degrades when using Na₂CO₃ solutions. As previously reported, levels as high as 15-20 percent can be obtained with NaOH solutions. At these levels, NF is produced by neutralization and distillation.

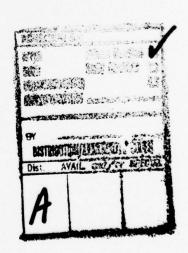

CONTENTS

			Page No.
Summar	у.		1
Study			5
I.	Inti	roduction	5
	Α.	Toxicity of Tetranitromethane	5
	В.	Present Fume Recovery System	6
	c.	Previous Investigations	6
II.	Inve	estigation of Operating Parameters	6
	Α.	Description of Scrubbing Unit	6
	В.	Analysis of the Gas Stream	8
	c.	Stability of Hydrogen Peroxide	8
	D.	Scrubbing Efficiencies at Low Sodium Nitroform Concentrations	10
	Ε.	First Extended Column Operation	10
	F.	Second Extended Column Operation	12
	G.	Stability of Sodium Nitroform in the Scrubbing Liquid	16
III.	Pote	ential Economic Aspects	20
IV.	Cond	clusions and Recommendations	21
	Α.	Conclusions	21
	В.	Recommendations	21
Appen	dix	A - Laboratory Analysis Procedures	22
Distril	hutia	on List	67

LIST OF FIGURES

Figure No.		Page No.
1	Diagram of TNM scrubber flows	7
2	Albone DS - H ₂ O ₂ concentration vs time in 0.45 N Na ₂ CO ₃ solution	9
3	Gas scrubbing efficiency, extended run No. 1	14
4	Ratio of m1 of $\rm H_2O_2$ added to grams of TNM through column versus time for extended run No. 1	15
5	Ratio of ml of $\mathrm{H}_2\mathrm{O}_2$ added to grams of TNM through column versus time for extended run No. 2	17
6	Gas scrubbing efficiency, extended run No. 2	19

LIST OF TABLES

Table No.		Page No.
1	Sodium Carbonate/Hydrogen Peroxide Column Scrubbing	11
2	Summary of First Extended Column Scrubbing Run	13
3	Summary of Second Extended Column Scrubbing Run	18

STUDY

I. INTRODUCTION

Previous work $\frac{1}{2}$ established that TNM could be effectively removed by scrubbing the TNT fume recovery tail gas with Na₂SO₃ solution. However, recovery of the NF salt, which has a potential market value, was not feasible because the salt was not stable in the Na₂SO₃ solution. Other scrubbing solutions $\frac{2}{2}$ were evaluated to establish the feasibility of economically achieving recovery of NF. A NaOH solution combined with caustic stabilized H₂O₂ (Albone "DS" peroxygen compound from DuPont) produced stable NF which could be recovered by neutralization and distillation. The fume recovery stream contains, in addition to 750-1000 ppm TNM, 2 to 5 percent each of carbon dioxide (CO₂) and carbon monoxide (CO). The CO₂ reacts with NaOH to produce Na₂CO₃, thus depleting the NaOH. The purpose of this study was to investigate the effect of CO₂ absorption from the fume gas stream by using a Na₂CO₃-H₂O₂ scrubbing solution. These data would also establish the feasibility of using Na₂CO₃ as the feed alkali which is less expensive and easier to handle than NaOH.

A. Toxicity of Tetranitromethane

Tetranitromethane, $C(NO_2)_4$, is a toxic by-product produced during the manufacture of TNT. It is a heavy oily liquid (sp. gr. 1.65) which solidifies at 3°C and boils at 126°C without decomposition 3/. It has a toxic hazard rating and the recommended personnel exposure level given by the American Conference of Government and Industrial Hygienist (ACGIH) is one part per million in air or 0.8 milligrams per cubic meter of air 4/.

Morris, J. A., Propellant Plant Pollution Abatement - Elimination of NO_X in Process Tail Gas from TNT Manufactured by Absorption in Sulfuric Acid, Final Engineering Report on Production Engineering Project PE-352 (Phase I), RAAP, April 1973.

Mathes, C. D., Removal and Recovery of TNM from TNT Manufacture, Supplementary Engineering Report on Production Engineering Project PE-352, RAAP, October 1975.

^{3/} Urbanski, T., Chemistry and Technology of Explosives, Volume 1, p. 588, Pergammon Press, 1964.

^{4/} Sax, Irving N., Properties of Industrial Materials, p. 1151, 3d Edition.

B. Present Fume Recovery System

During previous operation of the TNT Plant at Radford Army Ammunition Plant (RAAP), the fumes from nitrating operations were passed through water scrubbers which removed approximately 90 percent of the $\rm NO_X$ but none of the TNM. This allowed 300 to 600 ppm (V/V) of TNM to reach the atmosphere. A separate stack venting the acid washer also discharged TNM and will be combined with the present fume gas stream on start up of the rebuilt lines. Emissions are estimated to be 750-1000 ppm when these two streams are combined.

C. Previous Investigations

Cursory laboratory and bench-scale studies were conducted under PE-352 to evaluate three scrubber solutions for the abatement of TNM. The three solutions were Na₂SO₃, NaOH with stabilized H₂O₂ and Na₂CO₃ with stabilized H₂O₂ $\frac{5}{}$. All three solutions effectively removed TNM from the tail gases. The Na₂SO₃ scrubbing solution was eliminated from consideration because the SNF which formed decomposed very rapidly, i.e., NF could not be recovered from the scrubbing solution as a marketable by-product. Both the NaOH-H₂O₂ and Na₂CO₃-H₂O₂ systems effectively removed the TNM and the SNF could be converted to NF by neutralization and vacuum distillation of the solution, but no long term scrubbing data were available to assess the effect of CO₂ absorption. Also, little information was available on total SNF salt buildup in the scrubbing solution.

II. INVESTIGATION OF OPERATING PARAMETERS

A. Description of Scrubbing Unit

A schematic of the bench-scale system is shown in Figure 1. The scrubbing unit was a heavy wall glass column 1.5 m high with an inside diameter of 102 mm and packed to a depth of 0.9 m with ceramic saddles. The 0.9 m of packing contained a free volume of five liters. The entire system was maintained under a reduced pressure which was produced by a Thomas Industries, Incorporated Model 2727CA39, two stage diaphragm stainless steel pump attached to the exit side of the column. TNM in the exit gas was monitored with a Miran II infrared (IR) gas analyzer $\frac{6}{}$.

^{5/} Gilligan, W. H., Hall, T. N., Removal of Tetranitromethane from Air Streams, Naval Surface Weapon Center, White Oak, Technical Report 75-128, October 1975.

^{6/} Murray, J. R., Monitoring and Controlling Systems for Tetranitromethane Pollutants in TNT Exhaust Gases, Final Report on Production Engineering Project PE-499, Radford Army Ammunition Plant, to be published.

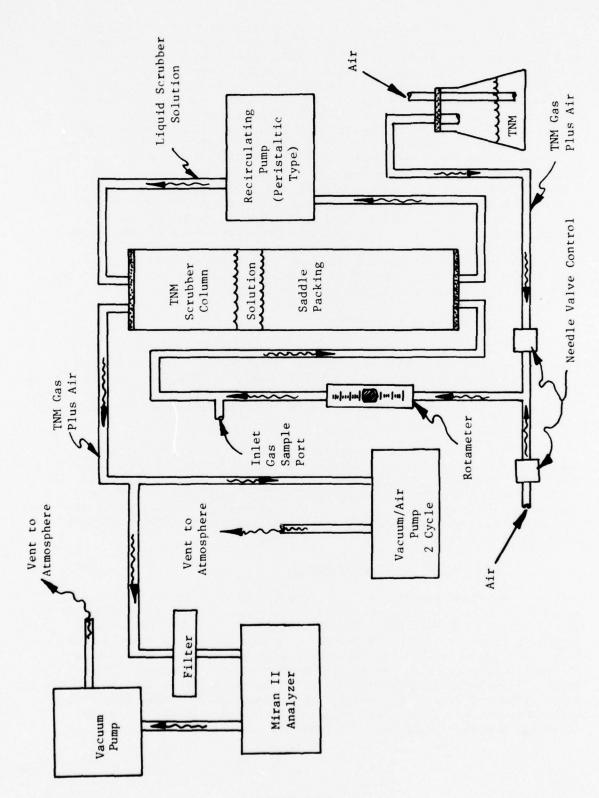


Figure 1. Diagram of TNM scrubber flows

Liquid TNM was placed in a 250 ml Erlenmeyer flask nebulizer. Air was bubbled through the liquid TNM and then mixed at the column inlet with additional air controlled by a needle valve. By adjusting the two air flows, the TNM concentration could be varied over a wide range. The Erlenmeyer flask was used as a nebulizer because of its large diameter flat bottom as compared to standard air bubblers. The flat bottom permitted a supply of TNM for a day's operation without a rapid change in liquid depth. A change in liquid depth would have required numerous changes in air to TNM vapor flows to maintain a constant TNM inlet concentration. The TNM stream was then passed through a flowmeter and into the bottom of the scrubber column. A 1500 ml filtration flask was inserted in the gas line at the exit of the column just prior to the vacuum pump to prevent any liquid carryover from reaching the vacuum pump. A tee was also mounted in the exit line to allow the gas to be pulled through the IR analyzer for continuous monitoring of TNM concentration. The liquid phase in the scrubber column was constantly circulated from the bottom to the top with a variable speed Monostat varistaltic pump. A tee was placed in the inlet and outlet lines to the pump to take samples or make additions to the liquid phase.

B. Analysis of the Gas Stream

In the early portion of this project, the TNM in the inlet and exit gas streams was monitored using the IR analyzer. This was found to be unsatisfactory for the inlet stream because, at TNM concentration levels above 300 ppm, the slope of the absorbance versus TNM concentration curve is very flat and, therefore, is not sensitive to high TNM concentrations.

The inlet gas was, therefore, analyzed by several methods. One method used a Thermo Electron Corporation Model 10A Chemiluminescent ${\rm NO-NO_X}$ Gas Analyzer. See Appendix A-2 for description of the method. A Hewlett-Packard Gas Chromatograph Model 5700A equipped with a flame ionization detector was also used for TNM analysis. A description of this method is shown in Appendix A-1. Both methods were found suitable for inlet TNM analysis.

C. Stability of Hydrogen Peroxide

Hydrogen peroxide is not stable in basic solution unless a stabilizer such as magnesium sulfate is present. In order to determine the stability of DuPont Albone DS-50 stabilized $\rm H_2O_2$ in a solution of Na₂CO₃, a known concentration was prepared and allowed to stand during which the $\rm H_2O_2$ concentration was monitored. The original solution contained 1.04 percent $\rm H_2O_2$ in a 0.45 N Na₂CO₃ aqueous solution. After 16 hours, the solution had spontaneously reduced in strength to 0.22 percent $\rm H_2O_2$. Figure 2 is a graph showing $\rm H_2O_2$ concentration versus time. These data indicate that if work is not being performed with the scrubbing solution, reactions continue thus consuming the residual $\rm H_2O_2$.

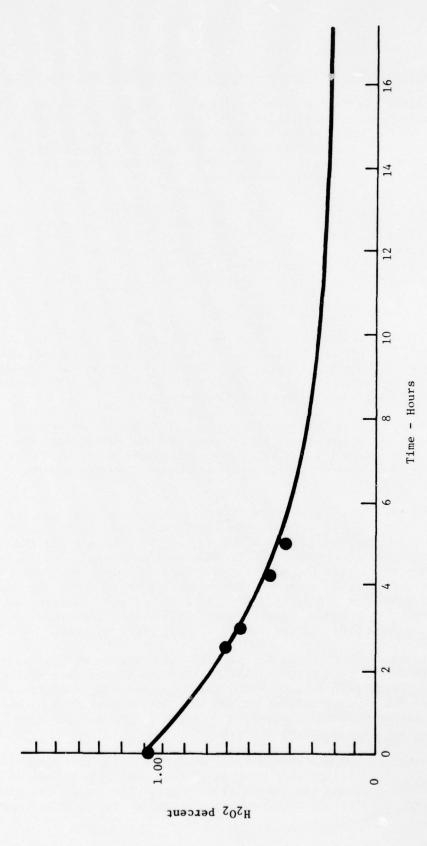


Figure 2. Albone DS - $\mathrm{H}_2\mathrm{O}_2$ concentration vs time in 0.45 $\underline{\mathrm{N}}$ Na $_2\mathrm{CO}_3$ solution

D. Scrubbing Efficiencies at Low Sodium Nitroform Concentrations

The first phase of the investigation was to determine the optimum scrubber operating parameters. The variables considered were packing depth, Na_2CO_3 concentration, H_2O_2 concentration, TNM inlet concentration, gas flow rates and volume of liquid holdup in the column. From the data shown in Table 1, the following parameters were chosen as the most suitable for the scrubbing studies:

 Na2CO3
 2.25 to 2.50 percent

 H2O2
 2.0 percent

 TNM Inlet
 750 - 950 ppm

 Gas Flow
 24 - 26 1/min

 Packing Height
 0.9 m

 Scrubbing Liquid
 4 liters

E. First Extended Column Operation

Four liters of scrubbing solution were prepared containing 1.82 percent $\rm H_2O_2$ and 2.58 percent NaCO3. This solution was then pumped into the column containing 0.9 m height of ceramic packing. This solution was circulated from the bottom of the column to the top at a rate of approximately one $1/\min$ using a variable speed pump.

The column was maintained at a pressure of 250 mm of mercury using a two-stage diaphragm vacuum pump. Room air was pulled into the column through the liquid TNM and the air makeup needle valve at a rate to produce a TNM inlet concentration between 700 and 1000 ppm and gas flow of 24 to 25 1/min.

During the first 12.25 hours of operation, an attempt was made to keep the level of $\rm H_2O_2$ at 1.80 percent which required a total of 550 ml of additional 50 percent $\rm H_2O_2$. The removal of TNM from the air flow was excellent with exit concentrations between 10 and 50 ppm. The column was operated only during the day and was shut down overnight and week-ends. During shutdown periods, the $\rm H_2O_2$ concentration dropped to zero. It was noted during startup that the first few milliliters of $\rm H_2O_2$ entering into the scrubbing solution immediately decreased the TNM in the effluent indicating that a much lower concentration of $\rm H_2O_2$ might be used.

During the next 28 hours of the run, the addition of $\rm H_2O_2$ was based on the TNM concentration in the effluent stream rather than trying to maintain a constant percentage. Using the same operating conditions, except the inlet TNM averaged higher at 900 ppm, only 268 ml of $\rm H_2O_2$ was required. The effluent TNM concentration averaged 45 ppm and the $\rm H_2O_2$ level ranged between zero and 0.05 percent.

The effluent TNM was continuously monitored using the Miran II analyzer and when the concentration reached 70 - 80 ppm, five to ten ml of $\rm H_2O_2$ were added, reducing the TNM to 35 - 40 ppm. The higher consumption of $\rm H_2O_2$ during the first 12.25 hours appeared to be due to rapid decomposition

Table 1

Sodium carbonate/hydrogen peroxide column scrubbing

Scrubbing Liquid in Column, liters	154	4 6	770	744	7 7	444
Packing Height in Column, mm inches	22 22 22	36	38 8	3,88	36 86	36 36 36
Pa He in C	559 559 559	914	914	914 914 914	914	914 914 914
Flow Rate Through Column, 1/min	34 34 34.5	25 25	30 24.5	23.8 24.6	24.3	24.6 24.6 24.8
Removal Efficiency,	83 73 42	97	97	98 95 97	96 95	98 97 98
TNM Exit, ppm	55 75 160	15	18 21	15 17 17	18 26	15 18 24
INM Inlet, ppm	325 275 275	540	760	760 250 395	465	720 720 950
Hydrogen Peroxide, %	0.76 0.76 0.76	1.29	1.29	1.25 1.80 0.95	0.55	0.78 0.81 0.25
Sodium Carbonate, %	1.40 1.40 1.40	2.53	5.24	5.28 4.23	4.32	0.52 0.26 2.22
Run	4-1 4-2 4-3	5-1	5-3	7 2 7	5-8 5-9	5-10 5-11 5-12

of the $\rm H_2O_2$ rather than being consumed in a reaction with TNM. The Na₂CO₃ concentration remained between 1.4 and 2.5 percent. The $\rm H_2O_2$ addition was based on the TNM effluent concentration for the remainder of the run. After 49 hours of operation, the scrubbing solution color had changed from yellow to red and the consumption of $\rm H_2O_2$ had increased four to five times. See Table 2 for comparison of the amount of $\rm H_2O_2$ added per gram of TNM. This change was thought to have been due to the decrease in pH. A solution of 1.25 percent Na₂CO₃ and 0.1 percent $\rm H_2O_2$ has a pH of 10.58 and the pH of the scrubbing solution after 53.5 hours was 9.21. The SNF concentration was 4.77 percent.

Operation of the column was continued for a total of 72 hours to determine if the consumption of H₂O₂ could be reduced. Adding Na₂CO₃ to the scrubbing solution resulted in short periods of reduced H₂O₂ consumption. Titration of the scrubbing solution after 59 hours with 0.3 N hydrochloric acid (HCl) using a pH meter showed the Na₂CO₃ concentration was not 2.45 percent as determined using the dead stop titration method but 1.21 percent. The difference between the 2.45 and 1.21 percent was due to 1.42 percent sodium bicarbonate (NaHCO₃) in the solution.

The run was terminated after 74 hours. The analysis of the scrubbing solution was 2.66 percent Na₂CO₃, 1.87 percent Na_HCO₃, 4.65 percent nitrates, 2.43 percent nitrites, and 6.75 percent SNF.

Figure 3 shows the decline in the efficiency of TNM removal from the gas stream versus hours of operation. The graph presented in Figure 4 shows the ratio of $\rm H2O_2$ consumption per gram of TNM entering the column versus hours of operation. It can be seen that the column solution will provide an operation for 40 hours and produce a SNF concentration of only 5.5 percent before additional reactants are required.

A true conversion efficiency of TNM to SNF was not obtained because there were some fluctuations in the total scrubber volume and also some variance in the test for SNF at the higher concentration. The average estimated consumption efficiency of the first extended run was 65 percent. This was calculated on the basis that one mole of TNM reacts to form one mole of SNF. It does not take into account any side reaction that may involve either the TNM or SNF.

F. Second Extended Column Operation

In order to better understand the operation of the TNM scrubber, a duplicate run was initiated. The four liters of starting scrubbing solution contained 2.66 percent Na₂CO₃ and 0.07 percent Na₂CO₃ and no H₂O₂. The H₂O₂ was added as required and the Na₂CO₃, Na₂HCO₃ and pH were monitored in addition to parameters in the first run. After 4.5 hours of operation, the pH had dropped to 9.75, the Na₂CO₃ was 1.39 percent, and the Na₂HCO₃ was 0.57 percent. After 15.25 hours, the pH had again dropped to 9.45 and the solution contained 0.54 percent Na₂CO₃. Only small amounts of H₂O₂ were needed for each gram of TNM and the conversion of TNM to SNF was 83.04 percent with 2.52 percent SNF in solution. The yield

Table 2

Summary of first extended column scrubbing run

H ₂ 0 ₂ ,	1.82	0		0.03	0	0.01	0.03	0.07		1	•	0	0		•	ı
Vol. in Col,	0007	4000	4000	4000	4000	4000	4000	4000	3200	4000	4000	4000	3000	3000	3000	3000
$^{Na}_2^{CO}_3$ Added,	00	0	0	0.09	32.0	0	0.04	20.0	0	0	0	70.0	45.0	0.09	0	25.0
60% NaOH Added,	00	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
$\frac{\text{H}_2\text{O}_2}{\text{TNM}}$	3.83		8.70	1.52	1.41	0.53	96.0	1.41		0.59	1.72	2.65	4.67	5.76	2.84	5.19
50% H ₂ 0 ₂ Added,	150	1	400	70	45	20	63	20	1	07	65	20	140	200	20	110
TNM Removed,	99.34		98.61	93.27	94.16	94.56	92.80	92.93		93.69	91.91	82.06	87.45	80.78	90.26	86.05
Exit TNM,	5 9	1	10	52	20	52	9	63	,	99	71	115	88	138	79	102
Inlet TNM, ppm	760		719	773	856	926	889	891	•	887	878	641	701	718	811	731
띱												9.21	9.30	10.43	9.85	8.97
Used Der Day, g	39.2		0.94	0.94	31.9	38.0	65.4	35.4	•	68.3	37.7	18.9	30.0	34.7	17.6	21.2
SNF,	0.65	0.62	•	2.22	3.28	4.23	5.12	5.70	5.62	•		4.77	•			6.75
NaHCO3,	(1)													0.05	0.77	1.87
Na ₂ CO ₃ ,	2.58	1.65	1.63	2.70	2.36	1.85	1.90	2.41	3.10	2.72	1.97	1.20	2.33	4.35	3.63	2.66
Operation Total Hours	0 9	10	12.25	15.50	22.00	28.50	35.5)	39.00	39.00	45.25	48.75	53.50	57.5)	64.53	67.50	72.03
Date	12-2-76	12-7-76	12-8-76	12-9-76	12-13-76	12-14-76	12-15-76	12-16-76	2-3-77	2-4-77	2-8-77	2-9-77	2-11-77	2-15-77	2-16-77	2-17-77

(1) 12-2-76 through 2-11-77 analyzed for total alkalinity only and reported as Na_2CO_3 .




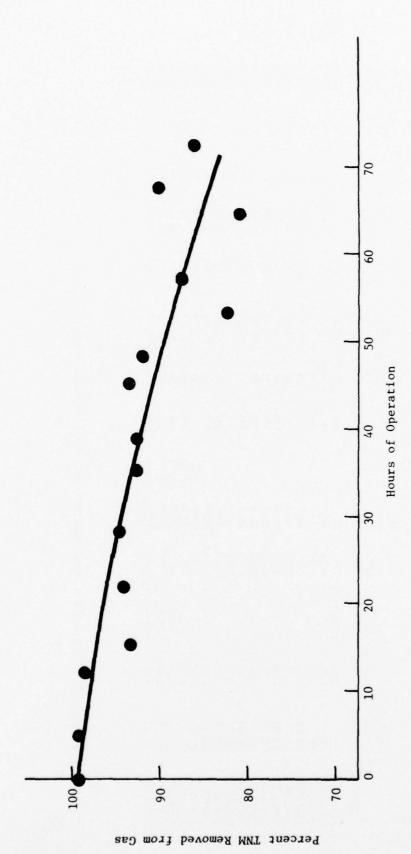


Figure 3. Gas scrubbing efficiency, extended run No. 1

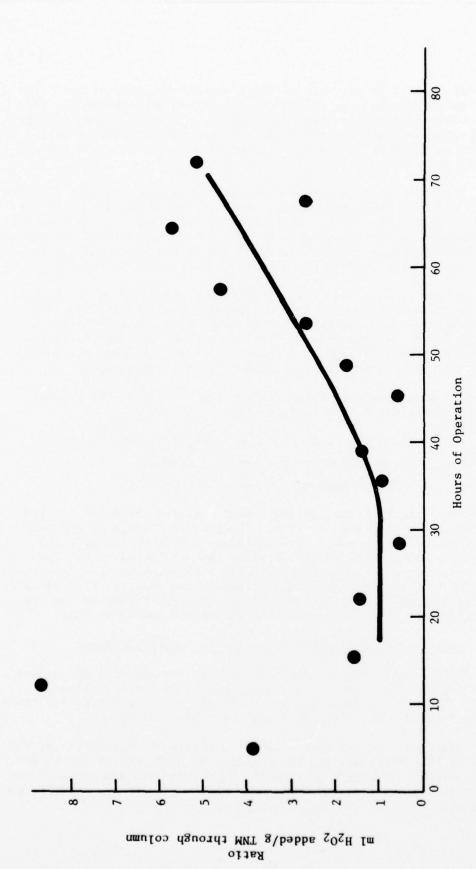

Ratio of m1 of $\rm H_2O_2$ added to grams of TNM through column versus time for extended run No. 1 Figure 4.

was calculated based on one mole of TNM producing one mole of SNF. The number of moles entering the column was determined by weighing the TNM vaporizer, before and after a day's operation. After 28 hours of operation, the column contained 4.63 percent SNF but the consumption ratio (ml of $\rm H_2O_2$ to grams of TNM) had increased by a factor of three and the pH steadily decreased.

Figure 5 shows an increase in H_2O_2 consumption through 28 hours and then a decrease through 43 hours. This condition was not noted for run No. 1 as seen in Figure 4. Throughout the remainder of the run, the H_2O_2 consumption increased steadily but could be reduced for short periods by addition of Na_2CO_3 or NaOH to increase the pH and lower the $NaHCO_3$ concentration. Table 3 shows the amounts of each reactant required.

As observed in the first extended run, the NaOH has a slightly greater effect in reducing the $\rm H_2O_2$ consumption than the Na₂CO₃. This indicates that the main factors which increase $\rm H_2O_2$ consumption are low pH and high NaHCO₃ concentration. The five percent CO₂ that is in the TNT process exit gas with TNM will lower the pH and increase the NaHCO₃ concentration, and in turn increase NaOH or Na₂CO₃ consumption.

The reactions that occur between the CO2 in the TNT process exit gas, Na2CO3 and NaOH are as follows:


$$CO_2 + 2 NaOH$$
 -- $Na_2CO_3 + H_2O$
 $CO_2 + Na_2CO_3 + H_2O$ -- $2 NaHCO_3$
 $NaOH + NaHCO_3$ -- $Na_2CO_3 + H_2O$

These equations indicate that during actual operation with two to five percent CO_2 in the exit gas, the NaHCO3 content will increase and reduce the efficiency of TNM removal. The addition of NaOH will reduce the NaHCO3 level, increase the pH and increase the efficiency of the TNM removal. The second extended run ended after 63 hours of operation when the ratio of H2O2 to TNM reached 5.85. During the run, the efficiency of TNM removal dropped from 94.88 to 88.06 percent (see Figure 6) and the overall efficiency of the conversion of TNM to SNF was 64 percent.

G. Stability of Sodium Nitroform in the Scrubbing Liquid

During both extended runs, there were periods when the column operation was shut down due to lack of materials or a malfunction of equipment. The SNF concentration was monitored periodically during these periods to determine its stability in the scrubber solution.

The first run was shut down for a period of 44.5 days. At the beginning of this interval, the SNF content was 5.70 percent and at the end, 5.64 percent. During this time the $\rm H_2O_2$ concentration was zero and the combined concentrations of Na₂CO₃ and NaHCO₃ calculated as Na₂CO₃ was 2.41 percent.

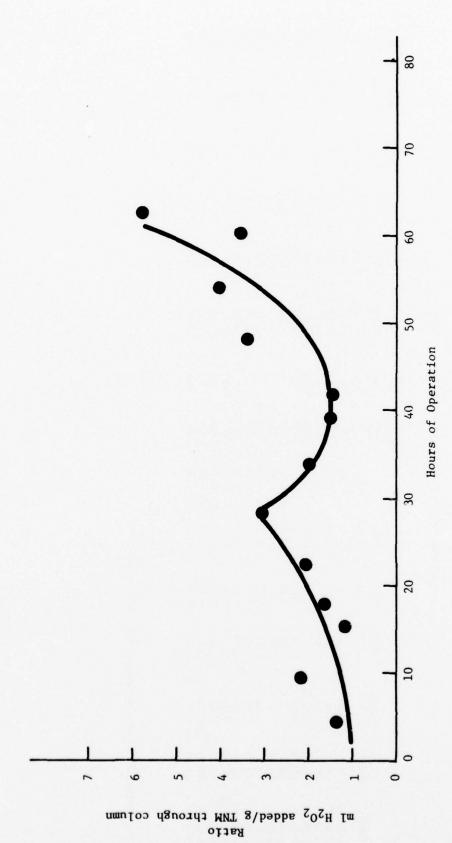


Ratio of ml of $\mathrm{H}_2\mathrm{O}_2$ added to grams of TNM through column versus time for extended run No. 2 Figure 5.

Table 3

Summary of second extended column scrubbing run

Vol in Col,	4000 4000 3950 4000	4000 4000 4000 3650 3350 2800 2800
Na ₂ CO ₃ Added,	100000	25 20 20 40 0 0
50% NaOH Added, ml	170000000000000000000000000000000000000	0 30 10 0 0
H ₂ O ₂ TNM, m1/g	1.34 2.19 1.13 1.64 2.02	3.07 1.96 1.48 1.41 3.35 4.00 3.57 5.85
50% H ₂ O ₂ Added, ml	- 60 80 60 60 100 100	150 120 90 70 210 240 245 155
TNM Removed, %	94.88 92.69 92.34 91.43	88.51 90.91 92.39 92.26 89.45 89.31 88.06
Exit TNM, ppm (1)	39 59 66 82 82	85 73 67 71 92 95 95
Inlet TNM, ppm (1)	- 761 807 770 770 769	740 803 880 917 872 903 889
Hd	10.95 9.75 10.05 9.45 9.47	9.45 9.05 9.20 9.65 9.40 9.06
TNM Used per Day, g	44.9 36.6 53.0 24.4 49.3	48.9 61.2 61.0 62.6 62.6 59.9 26.5
SNF,	0.92 2.52 2.85 3.48	4.63 6.18 7.42 7.97 9.42
NaHCO3,	0.07 1.05 0.57 0.94 0.86	1.18 0.97 0.97 1.20 0.77 0.83 1.34
Na2CO3,	2.66 1.21 1.39 0.54 1.34	0.97 0.74 0.36 1.75 1.00 0.54
Total	0 4.5 9.5 15.25 17.75 23.0	28.25 34.0 39.25 43.25 48.25 54.25 60.50
Date	2-18-77 2-18-77 2-25-77 2-28-77 3-2-77	5-4-77 6-8-77 6-9-77 6-10-77 6-13-77 6-21-77

(1) Average concentration during day's operation.

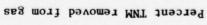

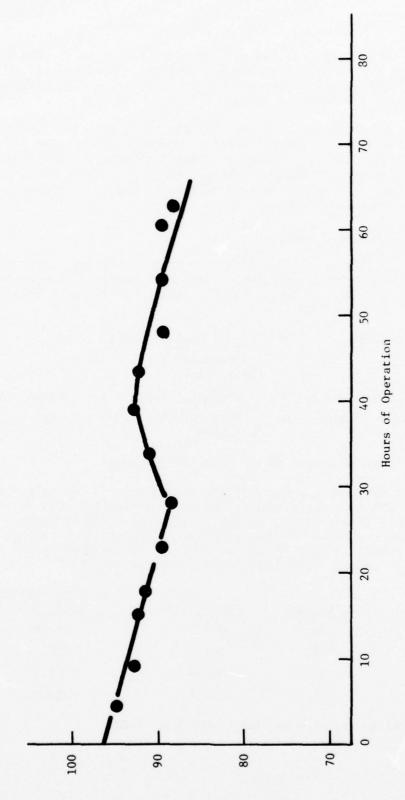


Figure 6. Gas scrubbing efficiency, extended run No. 2

The second extended run was shut down for 79 days. The SNF was 4.63 percent at the time of shutdown and 4.68 percent at the end of this period. The Na₂CO₃ was 1.18 percent and the NaHCO₃ was 0.97. These did not change during the shutdown period.

The above results show that the scrubbing solution can be stored for long periods of time without significant changes in the SNF content. This long-term stability is presumably attributable to the low level of $\rm H_2O_2$ remaining in the scrubbing solution. Previous reports $\frac{5}{}$ show that SNF is decomposed to form nitrite and presumably $\rm Na_2CO_3$ in the presence of $\rm H_2O_2$ for an extended period of time.

III. POTENTIAL ECONOMIC ASPECTS

A cost analysis was performed on the usage of Na₂SO₃ versus Na₂CO₃-Albone DS $\rm H_{2}O_{2}$ and NaOH-Albone DS $\rm H_{2}O_{2}$ for the recovery of a relatively stable nitroform salt. The equations describing the reaction are shown below:

$$C(NO_2)_4 + Na_2SO_3$$
 -- $C(NO_2)_3SO_3Na + NaNO_2$
 $Sulfonated*$
 $Nitroform$
 $C(NO_2)_4 + 9 Na_2CO_3$ -- $7 NaC(NO_2)_3 + 7 NaNO_3 + 4 NaNO_2 + 10 CO_2$
 $C(NO_2)_4 + 10 NaOH$ -- $2 NaC(NO_2)_3 + 4 NaNO_2 + Na_2CO_3 + 2 NaNO_3 + 5 H_2O$

*Further decomposition occurs with this compound.

The cost analysis was based on the manufacture of 204 kg per day (24 hours) of TNM from one nitration and purification building operating at a capacity of 454 Mg per day of TNT. Assuming entrained gases, CO, CO₂, NO, and NO_{χ} react with the scrubbing medium and column loss through vaporization result in only 50 percent efficiency, the cost of the essential ingredients for one day (24 hours) would be approximately:

Chemical	Kilograms	Cost/kg, \$	Essential Ingredients Total Cost
Na ₂ SO ₃	263	0.370	\$96.69
Na ₂ CO ₃	248	0.127	\$31.51
NaOH	278	0.384	\$103.67
н ₂ о ₂ *	1021	0.620	\$630.00

^{*}Required in addition to either Na₂CO₃ or NaOH.

The Na₂SO₃ scrubbing system would remove 204 kg of TNM at a cost of \$96.69 but no SNF would be available for conversion to NF. The Na₂CO₃ + $\rm H_2O_2$ would remove the same amount of TNM at a cost of \$661.51 and the NaOH - $\rm H_2O_2$ at a cost of \$733.67.

Assuming that all the TNM was converted to SNF according to the equations and that 90 percent of the SNF could be converted to NF, the cost per kg for essential ingredients would be \$5.34 per kg using $Na_2CO_3 - H_2O_2$. The cost of NF from a foreign supplier was \$26.50 per kg in 1975.

Additional processing cost would be incurred for utilities and labor but would be the same for all scrubbing systems. The cost of the conversion of SNF to NF has not been determined but the conversion would probably be performed by the purchaser.

IV. CONCLUSIONS AND RECOMMENDATIONS

A. Conclusions

- 1. The system NaOH-H2O2 is viable for the abatement of TNM and recovery of NF from a gas stream containing 750-1000 ppm TNM. The Na2CO3-H2O2 will also abate TNM but consumption of H2O2 increases drastically to maintain a 100 ppm level of TNM as the SNF salt concentration increases. This occurs because the high level of CO2 in the fume gas stream reacts with Na2CO3 to produce NaHCO3 which reacts slowly with TNM. Even with the NaOH system, CO2 will be absorbed to produce Na2CO3 which in turn can react with additional CO2 to form NaHCO3. Therefore, NaOH is the preferred base and its consumption will increase over theoretical requirements.
- 2. Long-term stability tests have indicated that solutions of SNF with the concentration studied, were stable with little or no deterioration. Based on these results, shipment of these solutions to a purchaser for final processing to NF appears possible.

B. Recommendations

Should the Army desire to recover NF for use in high energy propellant systems, on-line scrubbing studies would be required to determine control variables and SNF handling procedures. Further study of the neutralization and distillation areas would also be required if NF was the saleable end product.

APPENDIX A

LABORATORY ANALYSIS PROCEDURES

CONTENTS

Procedure	
A-1	Gas Chromatographic Method for the Determination of Tetranitromethane in Air
A-2	Chemiluminescence Method for the Determination of Tetranitromethane in Air
A-3	Miran II Infrared Spectrophotometric Method for the Determination of Tetranitromethane in Air
A-4	No. L-102, Analysis of Sodium Nitroform by Ultraviolet Spectrophotometry
A-5	No. L-101, Nitrate Analysis of Water by Ultra- violet Spectrophotometric Method
A-6	Analysis of Sodium Carbonate and Hydrogen Peroxide in Sodium Nitroform Scrubber Solution
A-7	Analysis of Tetranitromethane Scrubbing Solution for Sodium Carbonate and Sodium Bicarbonate Concentration
A-8	Determination of Nitrites

Procedure A-1

Gas Chromatographic Method for the Determination of Tetranitromethane in Air

Gas Chromatographic Method for the Determination of Tetranitromethane in Air

1. SCOPE AND APPLICATION

1.1 This method is suitable for determining tetranitromethane (TNM) in gas streams with concentrations between 300 and 1200 ppm (v/v) TNM.

2. SUMMARY OF METHOD

2.1 Sample is taken directly from the gas stream using a gas syringe and injected directly into the chromatographic column.

3. INTERFERENCES

3.1 Any compounds in the gas stream that will elute from the gas chromatograph (GC) at the same time as the TNM will interfere with this test.

4. APPARATUS

- 4.1 1000 41 gas tight syringe.
- 4.2 Hewlett Packard Model 5750 GC equipped with a flame ionization detector and a 12 ft 1/8" stainless steel column packed with Chromosorb WHP 80-100 mesh coated with 10 percent UCW 98 silicone rubber.
- 4.3 Hewlett Packard Model 3370B Integrator.

CALIBRATION

- 5.1 Weigh approximately 4 g of TNM into a 25 ml volumetric flask which is half filled with carbon disulfide. Fill the flask to the mark with carbon disulfide.
- 5.2 Using a 25 \times 1 syringe, inject 5 \times 1 into a gas sampling tube with a known volume. Calculate the concentration of TNM in the sample tube using the following equation:

PPM TNM =
$$\frac{g \text{ TNM}/25 \text{ m}^1 \text{ CS}_2 \times \text{V}_1}{25,000 \times 196.03} \times \frac{0.08205 \times 293}{1} \times \frac{10^6}{\text{V}_2}$$

 $V_1 = 41$ injected into gas sample tube

 V_2 = vol of gas sample tube in liters

- 5.3 Repeat 5.2 using 10 and 15 41 standards.
- 5.4 Inject a 500 Ml sample from each sample tube into the GC and record the peak areas.

- 5.5 Prepare a graph of peak area versus TNM concentration.
- 6. PROCEDURE
- 6.1 Withdraw 500 <1 of gas from the inlet side of the scrubber in a 1000 <1 syringe and inject into the GC. Record the peak area and determine TNM concentration from the calibration graph.

Procedure A-2

Chemiluminescence Method for the Determination of Tetranitromethane in Air

Chemiluminescence Method for the Determination of Tetranitromethane in Air

1. SCOPE AND APPLICATION

1.1 This method is suitable for measuring tetranitromethane (TNM) in gas streams with concentrations between 100 ppm and 1500 ppm TNM.

2. SUMMARY OF METHOD

2.1 A sample is removed from the gas stream and injected into the inlet side of the instrument. The TNM is converted to NO in the instrument and the resulting chemiluminescence generated with ozone is a measure of the TNM concentration.

3. INTERFERENCE

3.1 Any NO, NO $_2$ or material that can be converted to these species will interfere with this test.

4. APPARATUS

- 4.1 Model 10A self-contained chemiluminescent $NO-NO_X$ Gas Analyzer manufactured by Thermo-Electron Corporation.
- 4.2 Suitable strip chart recorder.

CALIBRATION

- 5.1 Weigh approximately 4 g of TNM into a 25 ml volumetric flask which is half filled with carbon disulfide. Fill the flask to the mark with carbon disulfide.
- 5.2 Using a 25 &1 syringe, inject 5 &1 into a gas sampling tube with a known volume. Calculate the concentration of TNM in the tube using the following equation:

PPM TNM =
$$\frac{\text{g TNM}/25 \text{ m1 CS}_2 \times \text{V}_1}{25,000 \times 196.03} \times \frac{0.08205 \times 293}{1} \times \frac{10^6}{\text{V}_2}$$

 $V_1 = \varkappa 1$ injected into gas sampling tube

V₂ = vol of gas sample tube in liters

- 5.3 Repeat 5.2 using 10 and 15 /1 standards.
- 5.4 Inject a 500 41 sample using a 1000 41 syringe from each standard into the gas stream entering the instrument and record the peak height.

- 5.5 Prepare a graph of peak height versus concentration.
- 5.6 Set the instrument controls so that peak height is approximately three quarters maximum chart travel.
- 6. PROCEDURE
- 6.1 Remove a 500 $\mbox{\em \mathcal{H}} 1$ sample using a 1000 $\mbox{\em \mathcal{H}} 1$ syringe from the scrubber gas stream.
- 6.2 Inject the sample into the gas stream entering the instrument.
- 6.3 Measure peak height and determine TNM concentration directly from the calibration curve.

Procedure A-3

Miran II Infrared Spectrophotometric Method for the Determination of Tetranitromethane in Air

Miran II Infrared Spectrophotometric Method for the Determination of Tetranitromethane in Air

SCOPE AND APPLICATION

1.1 This method is suitable for determining the concentration of tetranitromethane (TNM) in air.

SUMMARY OF METHOD

2.1 An air stream containing TNM is passed through the Infrared Analyzer which absorbs radiation at a set wavelength. The absorption of radiation is proportional to the TNM concentration.

3. INTERFERENCES

3.1 Any material in the gas stream that absorbs at the same wavelength as the TNM will interfere with the test.

4. APPARATUS

- 4.1 Miran II infrared analyzer equipped with a variable path length 20 meter sample cell with filters transmitting at 798 cm⁻¹ for TNM and 2564 cm⁻¹ as a reference. Windows are silver bromide and mirrors are gold coated. Instrument is manufactured by Wilks Scientific Corporation.
- 4.2 Vacuum pump

CALIBRATION

- 5.1 The Miran II analyzer sample cell is evacuated to an absolute pressure of 250 mm of mercury.
- 5.2 Inject one #1 of TNM into the closed system and allow one minute for TNM to vaporize.
- 5.3 Slowly open the sample cell valve to reach atmospheric pressure. Record absorbance reading.
- 5.4 Repeat 5.1 through 5.3 using 2, 3 and 4 41 of TNM.
- 5.5 Determine TNM concentration using the following equation:

PPM TNM =
$$\frac{\sqrt{1 \times 1.639 \text{ g/m1}}}{196.03} \times \frac{0.08205 \times (273 + T)}{1 \text{ atm}} \times \frac{10^3}{V}$$

/(1 = microliters of TNM injected

1.639 g/ml = density of TNM

196.03 g = molecular weight of TNM

0.08205 = gas constant

T = temperature of instrument °C

V = volume of instrument sample cell and connecting tubing in liters

6. PROCEDURE

- 6.1 Attach inlet side of instrument to sample port on exit side of column and allow a portion of exit gas to be flushed through the instrument by means of the vacuum pump. When instrument readings become steady, record absorbance.
- 6.2 Determine the TNM concentration directly from the calibration curve.

NOTE: Instrument settings must be the same for standards and samples.

Typical settings:

Path Length Dial = 9.05

Expansion = 1X

Zero Suppression = As necessary to zero instrument

Response = Fast

Meter = Diff, 0-1

Procedure A-4

Analysis of Sodium Nitroform by Ultraviolet Spectrophotometry



	HERCULES POWDER COMPANY					
		PROCEDURE MANUAL	Procedure No.	Policy No.		
HERCULI	ES POWDER COMPANY	Chemical Laboratories	L- 102 Function No.	lssu e		
			2.1.2	1		
	Army Ammunition Plant Radford, Virginia	Technical and Quality Assurance Department	Page _ 1 _ of _ 6 _	Date 12-18-74		
Statement	Statement of Function: Analysis of Sodium Nitroform Salt By Ultraviolet Spectrophotometry					
1.	SCOPE					
1.1	This document establis content in liquid samp	hes the procedure for deto les.	ermining sodium ni	troform		
2.	REQUIREMENTS					
2.1	None					
3.	APPLICABLE DOCUMENTS					
3.1	Laboratory Safety Manual					
3.2	Operating Manual for Beckman DK-2 Ultraviolet spectrophotometer or equivalent					
4.	MATERIALS					
4.1	Instrument Model DK-2	Beckman Ultraviolet spect	rophotometer			
4.2	Pipettes sizes 1 ml th	rough 10 m1				
4.3	100 ml volumetric flas	ks				
4.4	1000 ml volumetric fla	sks				
4.5	"Blue label" U♥ cells for DK-2					
4.6	2 % sodium hydroxide solution (in water)					
4.7	Tetranitromethane (TNM) for standards from Hummel Chemical Corporation)					
4.8	4.8 Hydrogen peroxide (50%)					
	,					
Approved:	Sawally hemical Laboratories Area		S Bolleto Technical Direct	or		

HERCULES POWDER COMPANY Radford Army Ammunition Plant Radford, Virginia	PROCEDURE MANUAL Chemical Laboratories Technical and Quality Assurance Department	Procedure No. L- 102 Function No. 2.1.2 Page 2 of 6	Policy No. 5 Issue 1 Date 12-18-74		
4.9 125 microliter	syringe				
5. SAFETY					
	flame resistant lab coats or all be worn at all times.	coveralls, and	conductive		
5.2 Rubber gloves s	hall be worn when working with	TNM.			
5.3 All sampling of adequate ventil	tetranitromethane shall be do	one in a hood wi	ith		
6. OPERATION					
	Turn on instrument and tungsten lamp. Make sure knob is on TUNGSTEN LAMP and not on HYDROGEN LAMP.				
6.2 Turn knobs besi	Turn knobs beside cell holders on photomultiplier (IX).				
6.3 Fill sample and	Fill sample and reference cell with 2 % sodium hydroxide solution.				
6.4 Set wavelength	Set wavelength to 500A mµ				
6.5 Open reference	Open reference light and sample light.				
6.6 Turn range to 0	- 1.				
6.7 Turn to % T and	adjust 100 % base line knob t	to 100 % reading	3.		
6.8 Turn to A and a	djust 0 % base line with zero	adjust knob.			
6.9 Set up instrume	nt as follows:				
A Time Constant 0 % Adj: 100 % Adj: Range Do not adjust	0.1 0 - 1 sensitivity.				
6.10 Place sample in	Place sample in cell holder nearest front of instrument.				
6.11 Place recording	paper in instrument.				
6.12 Set recorder pe	n to extreme right side and lo	ower pen.			
Approved: Saluki Chemical Laboratories	Area Suprivisor	W.J. Bold Technical Di	CECE		

HERCULES	POWDER COMPANY	PROCEDURE MANUAL	Procedure No. L-102 Function No.	Policy No.	
Radford Army Ammunition Plant		Chemical Laboratories		Issue 1	
Radf	ord, Virginia	Technical and Quality	2.1.2		
		Assurance Department	Page 3 of 6	Date 12–18–74	
				112-10-74	
6.13	Set scan time on 2X	X, scale expansion to 1X from	N and motors fr	com N to	
6.14	Turn switch below w	vavelength knob to $\overline{\tt ON}$.			
6.15	Let run until top o	of first peak comes off (near	340).		
6.16	Turn scan switch OF	<u>FF</u> .			
6.17	Turn motors to OUT.				
6.18	Turn scale expansion	on to N and lift recording pen			
6.19	Replace sample with time only lower the	a new sample and start at 6.	12 above, but t	this	
6.20	Repeat as often as required to analyze all samples.				
6.21	Preparation of Standard Curve.				
6.21.1	Prepare a 100 ml volumetric flask containing approximately 75 ml of a 2 % NaOH solution and 0.5 % H ₂ O ₂ . Accurately weigh to nearest milligram.				
6.21.2	Add 60 microliters of pure TNM to the flask. Perform all operations with TNM in a well ventilated hood. The solution will assume a lemon yellow coloration.				
6.21.3	Reweigh accurately to get the weight of TNM added.				
6.21.4	Make up the flask to 100 ml volume with a 2 % NaOH/0.5 % ${\rm H_2O_2}$ solution.				
6.21.5	Pipette 10 ml of the solution prepared into a 100 ml volumetric flask to get a 1:10 volumetric dilution. Mix thoroughly.				
6.21.6	Prepare 100 ml volumetric flasks to contain each, 1 ml, 2 ml, 3 ml, 4 ml, 5 ml, 6 ml, 7 ml, 8 ml, 9 ml and 10 ml of the solution prepared in 6.21.5 above. Make up to the mark using 2 % NaOH solution.				
6.21.7	These flasks contain the standards for preparing the Standard curve. Proceed to 6.1 above and measure absorbance with the Beckman DK-2 ultraviolet spectrophotometer.				
6.21.8	A Standard curve (below) is used to measure sodium nitroform content in samples.				
		$\sim \rho$			
Approved	Chemical Laboratories A		O. T. Bolle	to	
		uen ameratan	Technical	Director	

HEP CULES POWDER COMPANY	PROCEDURE MANUAL	Procedure No.	Policy No.
Radford Army Ammunition Plant Radford, Virginia	Chemical Laboratories	runction No.	lssue 1
	Technical and Quality Assurance Department	Page 4 of 6	Date 12-18-74

6.22	Analysis	of	Samples

- Pipette and weigh 1 ml of sample into a 1000 ml volumetric flask. Make up 6.22.1 to volume with 2 % NaOH. Use directly in sample colls.
- Analyze the sample by the Beckman DK-2 ultraviolet spectrophotometer, 6.22.2 starting in Step 6.1 above.
- 6.22.3 Measure the absorbance value obtained and determine the sodium nitroform concentration from the calibration curve.

Approved:

Chemical Laboratories Area Supervisor

HEFCULES POWDER COMPANY	PROCEDURE MANUAL	Procedure No. L-102	Policy No.
Radford Army Ammunition Plant Radford, Virginia	Chemical Laboratories	Function No.	Issue 1
	Technical and Quality Assurance Department	Page 5 of 6	Date 12-18-74

CALCULATIONS

Standards 60 μ l weighed accurately is approximately 0.1033 gram With 0.1033 g in 100 ml the concentration is 0.001033 g/ml. This sample is further diluted 10 ml to 100 ml to give 0.0001033 g/ml.

Aliquots are taken and diluted to 100 ml volume with 2 % NaOH to give the following concentrations:

	<u>A1</u>	liquot		Concentration X 10 ⁻⁶ g/ml
1	m1	contains		1.033
2	m1	contains		2.066
3	m1	contains	14	3.099
4	m1	contains	.,	4.132
5	m1	contains		5.165
6	m1	contains		6.198
7	m1	contains		7.231
8	m1	contains		8.264
9	m1	contains		9.297
10	m1	contains		10.330

These concentrations are used to construct a standard curve of absorbance versus concentration.

Samples

A 1 ml sample is accurately weighed and diluted to 1000 ml in a volumetric flask using 2 % NaOH. If the sample does not fall within the concentration range of the standard curve, other dilutions will be required. The absorbance is used to determine nitroform concentration on the standard curve.


% Nitroform salt = (conc. from curve) (dilution factor)(100)
(Sample wt)

Approved:

Chemical Laboratories Area Spervisor

Technical Director

38

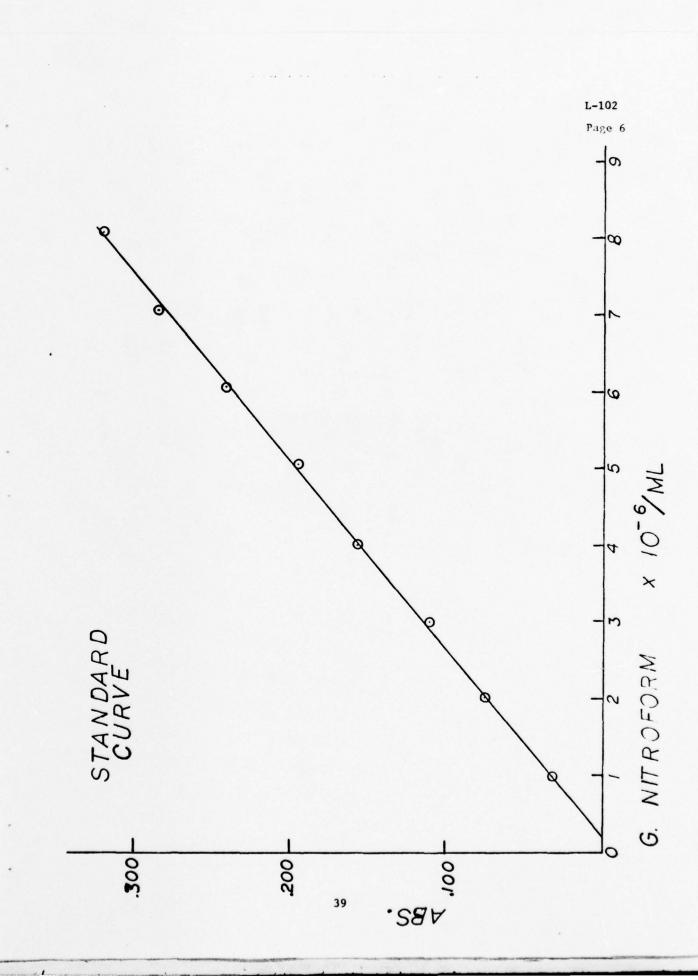

Procedure A-5

Nitrate Analysis of Water by Ultraviolet Spectrophotometric Method

L-101 November 14, 1974

NITRATE ANALYSIS OF WATER
BY ULTRAVIOLET SPECTROPHOTOMETRIC METHOD

HERCULES INCORPORATED

RADFORD ARMY AMMUNITION PLANT

Prepared By:

Reviewed By:

W. D. Wygal Jagal

R. A. Mundy

P. A. Walker, Jr.

Approved By:

T. G. Grady



MER CULES

HERCULES POWDER COMPANY	PROCEDURE MANUAL	Procedure No.	Policy No.
HERCOLES POWEER COMMENT	Chemical Laboratories	Function No.	Issue
Radford Army Ammunition Plent	Technical and Quality	2.1.2	1
Rodford, Virginia	Assurance Department	Pags 1 of 14	Date 11/14/74

Statement of Function:

Nitrate Analysis of Water by Ultraviolet Spectrophotometric Method

1. SCOPE

1.1 This document establishes the procedure for determining nitrates in outfall water using the Ultraviolet Spectrophotometric Method.

REQUIREMENTS

Outfal.	Maximum	Maximum
	mg/l Nitrates as N	mg/l Nitrites as N
004	18	
005	516	
006	38	•
007	260	6
009		4
012	159	6
013		3
018	2,036	4
019	270	
020	271	
026		
028		
Incinerator	•	

3. APPLICABLE DOCUMENTS

- 3.1 Instruction Manuals for Beckman Spectrophotometers Models DU and DK
- 3.2 Standard Methods for the Examination of Water and Wastewater, Method 1338
- 3.3 Authorization to Discharge Under the National Pollutant Discharge Elimination System, Permit No. Va 0000248

HED CHIES D	OWDER COMPANY	PROCE	DURE MANUAL	Procedure No. L-101	Policy No.	
HEKCULES P	OWDER COMPANY	TROCE	DONE WANTONE	Function No.	Issue	
Radford Army Ammunition Plant		Chemic	cal Laboratories	2.1.2	1	
Radfo	rd, Virginia		cal and Quality nce Department	Page 2 of 14	Date 11/14/74	
3.4	DUP 3786					
3.5	Laboratory Safet	y Handbook				
3.6	Laboratory Safet	y Manual,	L-6			
4.	MATERIALS					
4.1	Spectrophotomete attachment and h	r Beckman l ydrogen lan	Model DU, DK or equi	ivalent w/photon	multiplier	
4.2	Cells, matched s	ilica, 1 cm	n or longer light pa	ath		
4.3	Outfall water sa	mple				
4.4	Analytical balan	Analytical balance				
4.5	Filter paper, Gl	Filter paper, Glass fiber Type A, 47mm, Gelman Instrument Co.				
4.6	Demineralized wa	Demineralized water				
4.7	Volumetric flask	s, 50 ml,	1000 ml			
4.8	Stock nitrate so	10	21.8 mg potassium ni 000 ml demineralized 00 ppm NO3 as N			
4.9	Standard nitrate	solution:	100 ml of KNO3 sto 1000 ml with demi 10 ppm NO3 as N			
4.10	Hydrochloric aci	d (HC1) so	lution, 1 N = 10 ml 110 ml demineral		Cl diluted with	
4.11	Aluminum hydroxi	de (Al ₂ O ₂ .	120)			
4.12	Graph paper (20	x 20 to the	inch)			
4.13	Standard nitrite	solution:	303.95 mg potassiu in 1000 ml deminer 50 ppm NO3 as N			
4.14	Lens paper					
4.15	DK recorder paper	r				
			43			

Radford Ar	POWDER COMPANY my Ammunition Plant ord, Virginia	PROCEDURE MANUAL Chemical Laboratories Technical and Quality Assurance Department	Procedure No. L-101 Function No. 2.1.2 Page 3 of 14	Policy No. 5 Issue 1 Date
5. 5.1 5.2 5.3 5.4 5.5	Use only undamage If acid is spille Allow pipets to d Use rubber suctio	lame resistant coats or co	veralls shall be n off immediately plutions from pip	with water.
6.1	Source Selector Power Switch Filament Temperat Photomultiplier G Phototube Selecto Lead Resistor Swi Screen Bias Switch Slit Control Wavelength Select Function Switch Tungsten Lamp Swi Transmittance-Abs	ain Switch r tch h or tch	(14) - (15) - (16) - (3) - (4) - (18) - (13) - (12) - (2) -	Hydrogen ON 2 4 700 - 900 Photomultiplies 3 1.825 220 mu, 275 mu 0 - 100 ON 0 - 100
6.2	then turn the swi to the highest nu procedure). The does not fire, tu	Temperature Switch to Warn tch to Position 1. After I mber at which the lamp is a lamp is fired when it emits rn the switch back to Warn- ain. Allow an hour for ful	lamp is fired, tu stable (Position s a purple glow. -Up for a longer	rn the switch 2 for this If the lamp interval and
6.3 6.3.1	Preparation of St.			

HERCULES POWDER COMPANY	PROCEDURE MANUAL	Procedure No. L-101	Policy No. 5
Radford Army Ammunition Plant Radford, Virginia	Chemical Laboratories	Function No.	Issue 1
Radford, Virginia	Technical and Quality Assurance Department	Page 4 of 14	Date 11/14/74

- 6.3.1.1 Prepare nitrate standards by diluting three or more volumes of the standard nitrate solution, plus 1 ml of 1 N HCl to 50 ml with demineralized H₂O. Use buret for measuring standard nitrate solution.
 - (a) Blank 0 ml KNO3 solution, 1 ml 1 N HC1, dilute to volume with $\rm H_2O$
 - (b) 0.4 ppm 2 ml KNO $_3$ solution, 1 ml 1 N HCl, dilute to volume with H2O
 - (c) 0.8 ppm 4 ml KNO $_3$ solution, 1 ml 1 N HC1, dilute to volume with H $_2$ O
 - (d) 1.2 ppm 6 ml KNO3 solution, 1 ml 1 N HCl, dilute to volume with $\rm H_{2}O$
 - (e) 2.0 ppm 10 ml KNO3 solution, 1 ml 1 N HC1, dilute to volume with $_{\rm H2O}$
 - (f) 3.0 ppm 15 ml KNO3 solution, 1 ml 1 N HC1, dilute to volume with $\rm H_{2}O$

6.3.2 Nitrite Standards

- 6.3.2.1 Prepare nitrite standards by diluting three or more volumes of the standard nitrite solution, plus 1 ml 1 N HCl to 50 ml with demineralized H₂O. Use buret for measuring standard nitrite solution.
 - (a) Blank 0 ml KNO $_2$ solution, 1 ml 1 N HCl, dilute to volume with $_{\rm H2O}$
 - (b) 1 ppm 1 ml KNO $_2$ solution, 1 ml 1 N HCl, dilute to volume with H $_2$ O
 - (c) 2 ppm 2 ml KNO2 solution, 1 ml 1 N HCl, dilute to volume with $\rm H_2O$
 - (d) 3 ppm 3 ml KNO $_2$ solution, 1 ml 1 N HCl, dilute to volume with $_{\rm H_2O}$
 - (e) 4 ppm 4 ml KNO2 solution, 1 ml 1 N HCl, dilute to volume with $\rm H_{2}O$

6.3.3 Other Standards

HERCULES POWDER COMPANY Radford Army Ammunition Plant Radford, Virginia PROCEDURE MANUAL Chemical Laboratories Technical and Quality Assurance Department Procedure No L-101 Function No. Issue 2.1.2 1 Page 5 of 14 Date 11/1				
Radford Army Ammunition Plant Radford, Virginia Chemical Laboratories Chemical Laboratories Function No. Issue 2.1.2 1 Technical and Quality Page 5 of 14 Date				
Radford, Virginia Technical and Quality Page 5 of 14 Date				
	4/74			
6.3.3.1 When anionic surfactants or hexavalent chromium are known to be present in the sample, prepare correction curves for each of these substances at 2 mg/l intervals up to 10 mg/l. Use potassium dichromate (K2Cr2O7), and linear alkylate sulfonate with demineralized water.				
6.3.3.2 Measure the absorbances given by each substance at a wavelength of 220 against demineralized water and plot a separate curve for each.	Measure the absorbances given by each substance at a wavelength of 220 mu against demineralized water and plot a separate curve for each.			
6.4 Preparation of Standard Nitrate Curve	Preparation of Standard Nitrate Curve			
6.4.1 Rinse the reference cell several times with the nitrate blank; fill the cell with the blank.	the state of the s			
6.4.2 Dry the cell with lens paper.	Dry the cell with lens paper.			
6.4.3 With the shutter closed, mount the cell in the sample positioner. (Al have the shutter closed when opening the sample compartment.)				
	pegs left, turn the control clockwise; if the needle pegs right, turn the control counterclockwise. This sets the zero percent transmission			
6.4.5 Turn the shutter switch to open and adjust the Sensitivity Control to balance the null meter as above. This sets the 100 percent transmissi level.	balance the null meter as above. This sets the 100 percent transmission			
.4.6 With the sample positioner, place each nitrate standard, in turn, in the beam.				
6.4.7 Turn the shutter switch to open.	Turn the shutter switch to open.			
6.4.8 Balance the null meter with the Adjust Transmittance-Absorption Contro	Balance the null meter with the Adjust Transmittance-Absorption Control.			
6.4.9 Read the absorbance of each nitrate standard at a wavelength of 220 mu	Read the absorbance of each nitrate standard at a wavelength of 220 mu.			
NOTE: If the Dark Current is reset, the Sensitivity Control generally will require re-adjustment, and vice versa.				
6.4.10 Plot the ppm nitrate as N against the absorbance at 220 mu.				
6.5 Preparation of Nitrite Curve	Preparation of Nitrite Curve			
6.5.1 Repeat steps 6.4.1 through 6.4.9 using the nitrite standards and blank	Repeat steps 6.4.1 through 6.4.9 using the nitrite standards and blank.			
6.5.2 Plot the ppm nitrite as N against absorbance at 220 mu.	Plot the ppm nitrite as N against absorbance at 220 mu.			

HERCULES POWDER COMPANY Radford Army Ammunition Plant Radford, Virginia		PROCED	USE MANU	AL	Procedure No. L-101	Policy No.
					Function No.	Issue
			al Laborator		2.1.2	1
			e Departme		Fage 6 of 14	Date 11/14/74
6.6	Analysis of Sample					
6.6.1	To approximately 100 ml of sample, add a small amount (dip stirring rod into bottle) of aluminum hydroxide.					
6.6.2	Mix sample and filter through Glass fiber filter paper.					
6.6.3	Pipet the required quantity of the sample into a 50 ml volumetric flask. (Use Table I as a guide.)					
6.6.4	Add 1 ml of 1 N HCl solution to the sample.					
6.6.5	Make the sample to volume with demineralized water and thoroughly mix.					
6.6.6	Measure the absorbance at a wavelength of 220 mu to obtain the nitrate reading and at a wavelength of 275 mu to obtain the interference due to dissolved organic matter.					
6.6.7	Subtract 2 times the absorbance reading at 275 mu from the absorbance reading at 220 mu.					
6.6.8	Using the nitrite standard curve. convert the ppm nitrite (which has been determined by another method), if present, to absorbance at 220 mu, and subtract this value from the absorbance of the sample at 220 mu. Using this corrected absorbance, read the nitrate concentration from the nitrate standard curve. Correct for other known interferring materials in the same manner using the appropriate standard curve.					
	ppm Nitrate as N ppm Nitrate as NO ₃				lution factor	
6.7	DK-2 Settings Main Power Switch Detectors Hydrogen Lamp Operating Range Conscitivity Control Time Constant Selewavelength Motor Constant Selewavelength Motor Scale Expansion Sender Scanning Time Selewavelength Selector	1 (8) ctor (10) ontrol (2) lector (11) ctor (3)	Fig. III Fig. III Fig. II	- ON - 0 - - 11 6 - Out	itral	d 20X
6.7.1	Operation Selector Allow an hour for	(9)	Fig. III		sorbance	

			Procedure No	Policy No.
Radford Army Ammunition Flant Radford, Virginia		PROCEDURE MANUAL	L-101	5
		Chemical Laboratories	Function No. 2.1.2	Issue 1
		Technical and Quality Assurance Department	Page 7 of 14	Date 11/14/74
6.8	Preparation of Standard Curves			
6.8.1	Using standard nitrate and nitrite solutions as prepared in paragraphs 6.3.1 and 6.3.2 scan at 220 mu as follows:			
6.8.2	When other interferring materials are known to be present, prepare standards according to Paragraph 6.3.3, measure the absorbance at 220 mu and plot a separate curve for each.			
6.8.3	Make certain both sample and reference knobs are in off position anytime the sample compartment is opened.			
6.8.4	Fill both cells with the blank or reference solution; rinse cell three times.			
6.8.5	Dry the cells with lens paper.			
6.8.6	Turn the wavelength to 220 mu.			
6.8.7	Open the reference control; set the pen at zero on the chart with the zero knob.			
6.8.8	Then open the sample control and set the pen at 100% on the chart with the 100% knob.			
6.8.9	Repeat the zero and 100% setting operation.			
6.8.10	Close both the sample and reference controls.			
6.8.11	Fill the front cell with the standard material rinsing three times. Dry cell with lens paper.			
6.8.12	Place the cell in position (front) and close the sample compartment.			
6.8.13	Turn the wavelength control to 245 mu.			
6.8.14	Open both the sample and the reference controls at the same time (prevents bumping of the pen at either extreme).			
6.8.15	Turn the Scale E	xpansion to 1X; Wavelength Mot	tor Control to	In.
6.8.16	Set the pen on t	he chart.		
6.8.17	Turn the switch	to scan, and scan from 245 mu	to 220 mu.	
6.8.18	Lift the pen at exactly 220 mu.			

WDER COMPANY Ammunition Flant Virginia Turn scan switch	PROCEDURE MANUAL Chemical Laboratories Technical and Quality Assurance Department	Procedure No. L-101 Function No. 2.1.2 Page 8 of 14	Policy No. 5 Issue 1 Date 11/14/74			
Turn scan switch			11/14/14			
	6.8.19 Turn scan switch to stop and lift pen.					
6.8.20 Close both the sample and reference at the same time.						
Plot the ppm nitrate as N against the absorbance for each standard solution.						
Analysis of Sample						
Prepare sample according to Paragraph 6.6.						
Measure the absorbance at a wavelength of 220 mu to obtain the nitrate reading and at a wavelength of 275 mu to obtain the interference due to dissolved matter.						
Subtract 2 times the absorbance reading at 275 mu from the absorbance reading at 220 mu.						
been determined and subtract thi Using this corre the nitrate stan materials in the ppm Nitrate as N	by another method), if presen s value from the absorbance o cted absorbance, read the nit dard curve. Correct for othe same manner using the approp = net ppm Nitrate as N x	t, to absorbance f the sample at rate concentrate known interferiate standard dilution facto	e at 220 mu, 220 mu. ion from rring curve.			
	Close both the s Plot the ppm nit solution. Analysis of Samp Prepare sample a Measure the abso reading and at a dissolved matter Subtract 2 times reading at 220 m Using the nitrit been determined and subtract thi Using this corre the nitrate stan materials in the	Close both the sample and reference at the sample the ppm nitrate as N against the absorbation. Analysis of Sample Prepare sample according to Paragraph 6.6. Measure the absorbance at a wavelength of 220 reading and at a wavelength of 275 mu to obtain dissolved matter. Subtract 2 times the absorbance reading at 27 reading at 220 mu. Using the nitrite standard curve, convert the been determined by another method), if present and subtract this value from the absorbance of Using this corrected absorbance, read the nitrate standard curve. Correct for other materials in the same manner using the appropriate ppm Nitrate as N = net ppm Nitrate as N x	Close both the sample and reference at the same time. Plot the ppm nitrate as N against the absorbance for each st solution. Analysis of Sample Prepare sample according to Paragraph 6.6. Measure the absorbance at a wavelength of 220 mu to obtain the reading and at a wavelength of 275 mu to obtain the interfer dissolved matter. Subtract 2 times the absorbance reading at 275 mu from the a reading at 220 mu. Using the nitrite standard curve, convert the ppm nitrite (where the determined by another method), if present, to absorbance and subtract this value from the absorbance of the sample at Using this corrected absorbance, read the nitrate concentrate the nitrate standard curve. Correct for other known interfermaterials in the same manner using the appropriate standard ppm Nitrate as N = net ppm Nitrate as N x dilution factors.			

HERCULES POWDER COMPANY	PROCEDURE MANUAL	Procedure No. L-101	Policy No.
Radford Army Ammunition Float Radford, Virginia	Chemical Laboratories	Function No.	issue 1
	Technical and Quality Assurance Department	Page 9 of 14	Date 11/14/74

Table I

Outfall	Dilution, ml of Sample	Dilution Factor
004	25 - 50	2 - 1
005	10	5
006	25 - 50	2 - 1
007	1	50
009	25 - 50	2 - 1
012	1	50
013	1 - 5	50 - 10
018	$10 - NO_3$, $50 - NO_2$	5 - 1
019	10	5
020	1 - 5	50 - 10
026	10	5
028	25	2
Incinerator	25	2

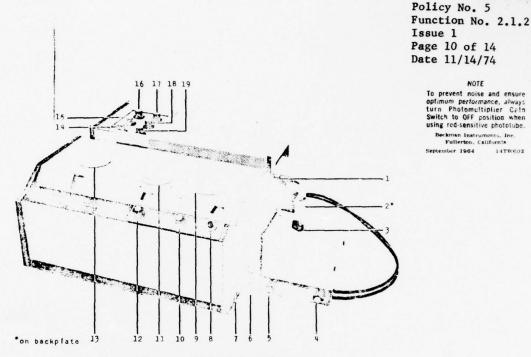


Figure 1. Operating Controls

- 1. SOURCE SELECTOR Selects either tungsten or hydrogen lamp source.
- 2. TUNGSTEN LAMP SWITCH Turns tungsten lamp on and off.
- 3. PHOTOTUBE SELECTOR Moves either blue-sensitive or photomultiplier or red-sensitive phototube into beam.
- LOAD RESISTOR SWITCH Selects proper load resistor for phototube.
- 5. SHUTTER SWITCH Blocks beam from striking phototube.
- 6. SAMPLE POSITIONER Positions sample and reference cells in beam.
- 7. FILTER POSITIONER Positions filter or open aperture in beam.
- 8. SENSITIVITY CONTROL Changes voltage across transmittance slidewire.
- 9. SLIT CONTROL Selects spectral bandwidth.
- 10. DARK CURRENT CONTROL Balances current flow in phototube when no energy is falling on cathode. Sets zero reference for transmittance-absorbance scale.

TRANSMITTANCE-ABSORBANCE CONTROL Provides readout of spectral analyses. Controls electrical null-balance system of instrument.

Procedure No. L-101

NOTE To prevent noise and ensure optimum performance, always turn Photomultiplier Caln Switch to OFF position when using red-sensitive phototube. Beckman Instruments, Inc. Fullerton, California

September 1964

- 12. FUNCTION SWITCH Selects either of three ranges full scale and circuit functions.
- 13. WAVELENGTH SELECTOR
 Selects desired wavelength. Scroll range:
 185-2000 millimicrons. Normal operating range:
 190-1000 millimicrons.
- 14. POWER SWITCH Turns power supply on and off.
- 15. FILAMENT TEMPERATURE SWITCH Controls power and varies filament temperature on hydrogen or mercury lamps.
- 16. PHOTOMULTIPLIER GAIN SWITCH Adjusts sensitivity on photomultiplier tube.
- 17. ZERO SUPPRESSION SWITCH Applies bucking voltage to compensate for background energy effects in flame, fluorescence or reflectance measurements.
- 18. SCREEN BIAS SWITCH
 Controls screen voltage on 2532 tube in spectrophotometer amplifies.
- 19. SOURCE CIRCUIT SWITCH Selects correct circuit for either hydrogen or mercury lamps.

Procedure No. L-101 Policy No. 5 Function No. 2.1.2 Issue 1 Page 11 of 14 Date 11/14/74


- 1. WAVELENGTH
 SELECTOR
 Permits manual selection of wavelength.
- 2. WAVELENGTH
 MOTOR CONTROL
 Engages and disengages automatic
 wavelength drive.
- 3. SCANNING
 TIME SELECTOR
 Selects different scanning times.
- 4. SCAN
 LIMIT CONTROL
 Automatically stops scan at
 predetermined wavelength.
- 5. WAVELENGTH
 DRIVE SWITCH
 Turns off and reverses wavelength
 drive.
- 6. SLIT
 SERVO CONTROL
 Engages and disengages slit servo
 motor.
- 7. MANUAL
 SLIT CONTROL
 Enables manual selection of slit width.
- 8. CHART

 PAPER CLIP

 Holds right end of chart paper.
- 9. PEN
 LIFT LEVER
 Raises pen from chart.
- 10. CHART
 PAPER RETAINER
 Retains left end of chart paper.
- 11. SCALE EXPANSION

 SELECTOR

 Disengages wavelength drive from pen
 carriage drive; permits wavelength expansion and contraction of recorded
 spectral regions.

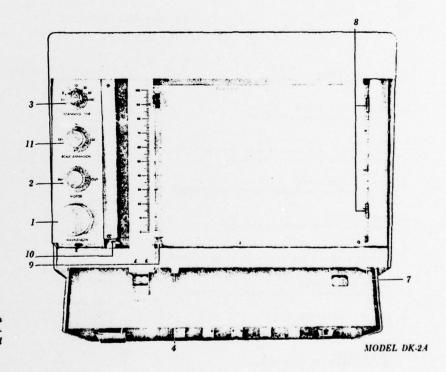

Top Panel Controls

Procedure No. L-101 Policy No. 5 Function No. 2.1.2 Issue 1 Page 12 of 14 Date 11/14/74

1. REFERENCE
ENERGY METER
Shows reference channel and slidewire
current; indicates operation of slit servo
system during transmittance or absorbance scan.

2. MAIN
POWER SWITCH
Turns on and off all instrument power.

3. POWER
INDICATOR LIGHT
Glows when instrument is receiving power.

4. SCAN
SWITCH
Turns on and off the wavelength drive
and recording system.

5. RECORDER
POWER SWITCH
Not shown, behind door; controls power
to recorder.

6. CHART
DRIVE SWITCH
Starts and stops chart drive.

7. CHART
DRUM KNOB
Permits manual rotation of chart drum.

8. SENSITIVITY
CONTROL
Determines slit width for transmittance
or absorbance operation; determines
gain of system for energy operation.

9. OPERATION
SELECTOR
Determines operating mode: absorbance, transmittance or energy.

10. TIME CONSTANT
SELECTOR
Controls response time to change in signal level; settings of 0.1, 0.2, 0.6 and 2.0 are approximately equivalent to periods (in seconds) of 1.5, 2.0, 4.0 and 11.0, respectively.

ADJUST CONTROL
Permits setting recorder pen to zero.

12. 100%
ADJUST CONTROL

11. ZERO

Permits setting recorder pen to 100%.

13. OPERATING
RANGE CONTROL
Controls ordinate expansion of signal—transmittance or absorbance.

9 10 11 12 13 8


MODEL DK-2A

Figure III

Front Panel Controls

53


Procedure No. L-101 Policy No. 5 Function No. 2.1.2 Issue 1 Page 13 of 14 Date 11/14/74

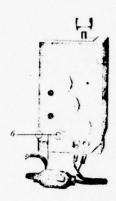


- 1. SOURCE
 SELECTOR
 Controls mirror for selection of sources.
- 2. SAMPLE
 SHUTTER CONTROL
 Blocks sample beam for setting zero base
 line.
- 3. REFERENCE
 SHUTTER CONTROL
 Blocks reference beam for setting rotating
 mirror in correct position for energy operation.
- 4. DETECTOR
 CIRCUIT SELECTOR
 Switches into circuit the lead sulfide cell or
 photomultiplier tube (two sensitivity settings).
- 5. DETECTOR
 BEAM SELECTOR
 Controls mirror to direct beam onto lead
 sulfide cell or onto photomultiplier tube.
 6. TUNGSTEN
- Controls power to tungsten lamp.
 7. SLIT HEIGHT MASK
 AND
 FILTER CONTROL
 Used to adjust exit slit height and to inter-

LAMP SWITCH

pose filter in exit beam.

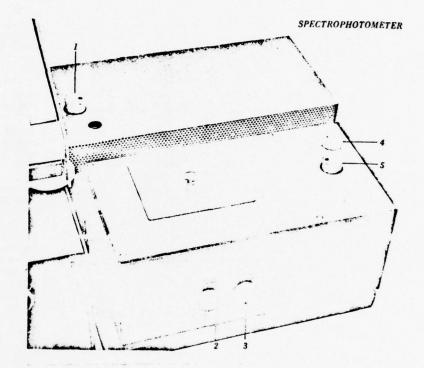

Procedure No. L-101 Policy No. 5 Issue 1 Page 14 of 14 Date 11/14/74

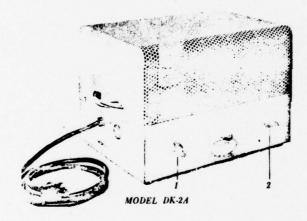

- 1. HYDROGEN LAMP
 POWER SWITCH
 Turns on and off all power to the unit (WARM
 setting of three-position switch is used when
 starting lamp).
- 2. HYDROGEN LAMP INTENSITY CONTROL Controls filament temperature of hydrogen lamp.
- 3. HYDROGEN LAMP STARTER BUTTON Starts arc in hydrogen lamp.
- 4. POWER
 INDICATOR LAMP
 Glows when power is supplied to unit.

Hydrogen Lamp Power Supply Controls.

On late-model instruments, the transistorized unit replaces the vacuum tube power supply.

Figure V

Procedure A-6

Analysis of Sodium Carbonate and Hydrogen Peroxide in Sodium Nitroform Scrubber Solution

Analysis of Sodium Carbonate and Hydrogen Peroxide in Sodium Nitroform Scrubber Solution

- 1. SOLUTIONS
- 1.1 HC1, 1/3 N
- 1.2 Hydrogen peroxide 1/10 strength. Dilute one part Albone DS 50 percent hydrogen peroxide with nine parts water (need not be exact).
- 1.3 Sodium arsenite, 0.25 N. Dissolve 16.24 g NaAsO₂ in water, add 20 ml 50 percent NaOH and dilute to one liter. To standardize, pipet exactly one ml of five percent hydrogen peroxide and titrate with NaAsO₂ solution as described in paragraph 3. Then pipet exactly one ml of the same hydrogen peroxide solution into a flask containing 50 ml water, 20 ml 1:1 H₂SO₄, 5 g KI, and three drops ammonium molybdate solution [2.5 g (NH₄)6Mo₇O₂₄ · 4 H₂O in 25 ml water, filtered if cloudy]. Stopper, swirl, let stand for five minutes and titrate with 0.2 N Na₂S₂O₃ to starch endpoint.

N NaAsO₂ = $\frac{\text{ml Na}_2\text{S}_2\text{O}_3}{\text{ml NaAsO}_2 \text{ to titrate one ml H}_2\text{O}_2}$

- 1.4 10 percent NaOH. Dilute 200 ml of 50 percent NaOH to one liter.
- 2. EQUIPMENT
- 2.1 Precision Scientific Company Auto-Aquatrator
- DETERMINATION OF Na₂CO₃
- 3.1 Pipet two ml (or any suitable volume) of the sample into an aquatrator vessel which is about half full of water. Add two ml of five percent H₂O₂. Make the following instrument settings:

With electrodes dry, set knob to "Direct Adjust" and adjust black needle to 20 \mathcal{M} A. (Needs to be checked only occasionally.) Turn knob to "Direct Titrate." Set end point hold for 30 seconds. Set Burette Selector to Left Burette. Fill left burette with standard HCl.

Put sample under burettes, start stirrer, and be sure electrode wires are covered. Set red needles at 0 and 20 for the beginning of the titration. As the black needle moves down scale, reset the right-hand red needle to about two A higher than the lowest point reached. For example, if the A readout is 20 -> 1 - 4, set the right-hand red needle at three. The actual settings will be determined by experience.

when the "START" light illuminates, read the burette and calculate Na_2CO_3 percent.

$$\% \text{ Na}_2\text{CO}_3 = \frac{\text{m1 HC1 x N HC1 x 5.3}}{\text{m1 of sample}}$$

- 4. DETERMINATION OF H₂O₂
- 4.1 Pipet two ml (or any suitable volume) of the sample into an Aquatrator vessel which is about half full of water. Add 10 ml 10% NaOH. Make the following instrument settings:

With electrodes dry, set knob to "Back Adjust" and adjust black needle to 20 $\mbox{\em A}$. (Needs to be checked only occasionally.) Turn knob to "Back Titrate." Set Burette Selector to right Burette. Fill right burette with NaAsO2 solution.

- 4.2 Put sample under burettes, start stirrer, be sure electrode wires are covered. Set red needles as necessary. (Try three and 14 to begin with.) The end point is reached when the black needle gives a low reading (probably below five MA) and has no tendency to revert to a higher reading between drops of titrant.
- 4.3 On back-titration the instrument adds titrant more slowly (in the region between the red needles) than it does in direct titration. The end point hold does not work in the back-titration mode; when the black needle moves to the left of the left red needle, the titration stops. The H₂O₂ percentage can be calculated as shown below:

%
$$H_2O_2 = \frac{m1 \text{ NaAsO}_2 \times \text{N NaAsO}_2 \times 1.70}{m1 \text{ of sample}}$$

Procedure A-7

Analysis of Tetranitromethane Scrubbing Solution for Sodium Carbonate and Sodium Bicarbonate Concentration

Analysis of Tetranitromethane Scrubbing Solution for Sodium Carbonate and Sodium Bicarbonate Concentration

1. SCOPE AND APPLICATION

1.1 This method is suitable for the determination of sodium carbonate (Na₂CO₃) and sodium bicarbonate (NaHCO₃) concentrations in tetranitromethane (TNM) scrubber solutions.

2. SUMMARY OF METHOD

2.1 A sample of scrubber solution is diluted with distilled water and titrated using 0.3 N hydrochloric acid. The acid is added in small increments and after each add the pH is recorded. A plot of ml of acid versus pH is prepared and from the 1 at the two points of inflection the concentrations of Na₂CO₃ and NaHCO₃ can be calculated.

3. REAGENTS

- 3.1 Distilled water
- 3.2 Standardized 0.3 N HCl
- 4. APPARATUS
- 4.1 pH meter
- 4.2 Magnetic stirrer
- 4.3 5 ml buret graduated in 0.02 ml

PROCEDURE

- 5.1 Pipet three ml of scrubber solution into 100 ml distilled water in a 250 ml beaker.
- 5.2 Place beaker on stirrer and position pH electrodes in sample.
- 5.3 Add 0.3 N HCl in 0.2 ml increments and record pH after each addition. As the end point is approached, allow more time between additions for the pH to stabilize.
- 5.4 When a pH of 3.5 is obtained, stop the titration.
- 5.5 On a standard graph paper, plot ml of HCl versus pH and draw a titration curve,
- 5.6 Determine the ml of HCl at the two inflection points.

- 6. CALCULATIONS
- 6.1 Calculation of Na₂CO₃

$$\frac{V_1 \times N \times 10.6}{3} = Percent Na2CO3$$

6.2 Calculation of NaHCO3

$$\frac{(v_2 - 2v_1) \times N \times 8.4}{3} = Percent NaHCO_3$$

 V_1 = Vol of HCl at first point of inflection (highest pH)

 V_2 = Total vol of HCl at second point of inflection (lowest pH)

N = Normality of HCl solution

Procedure A-8

Determination of Nitrites

Determination of Nitrites

SCOPE AND APPLICATION

- 1.1 This method is applicable to the determination of nitrite in drinking, surface, and saline waters, domestic and industrial wastes.
- 1.2 The method is applicable in the range from 0.01 to 1.0 mg NO_2 as N/1.

2. SUMMARY OF METHOD

2.1 The diazonium compound formed by diazotation of sulfanilamide by nitrite in water under acid conditions is coupled with N-(1-naphthy1)-ethylenediamine to produce a reddish-purple color which is measured in a spectrophotometer at 540 nm.

SAMPLE HANDLING AND PRESERVATION

3.1 Samples should be analyzed as quickly as possible. They may be stored for 24 to 48 hours at 4°C.

4. INTERFERENCES

4.1 There are very few known interferences at concentrations less than 1,000 times that of the nitrite; however, the presence of strong oxidants or reductants to the samples will readily affect the nitrite concentrations. High alkalinity (>600 mg/1) will give low results due to a shift in pH.

5. APPARATUS

- 5.1 Spectrophotometer equipped with 1 cm or longer cells for use at 540 nm.
- 5.2 Nessler tubes, 50 ml or volumetric flasks, 50 ml.

6. REAGENTS

- 6.1 Distilled water free of nitrite and nitrate is to be used in preparation of all reagents and standards.
- 6.2 Buffer-color reagent: To 250 ml of distilled water, add 105 ml conc. hydrochloric acid, 5.0 g sulfanilamide and 0.5 g N-(1-naphthyl) ethylenediamine dihydrochloride. Stir until dissolved. Add 136 g of sodium acetate (CH3COONa·3H2O) and again stir until dissolved. Dilute to 500 ml with distilled water. This solution is stable for several weeks if stored in the dark.

- 6.3 Nitrite stock solution: 1.0 ml = 0.10 mg NO₂-N. Dissolve 0.4926 g of dried anhydrous sodium nitrite (24 hours in desiccator) in distilled water and dilute to 1000 ml. Preserve with 2 ml chloroform per liter.
- 6.4 Nitrite standard solution: 1.0 ml = 0.001 mg NO_2 -N. Dilute 10.0 ml of the stock solution (6.3) to 1000 ml.

7. PROCEDURE

- 7.1 If the sample has a pH greater than 10 or a total alkalinity in excess of 600 mg/l, adjust to approximately pH 6 with 1:3 HCl.
- 7.2 If necessary, filter the sample through a 0.45 µpore size filter using the first portion of filtrate to rinse the filter flask.
- 7.3 Place 50 ml of sample, or an aliquot diluted to 50 ml, in 50 ml Nessler tube; hold until preparation of standards is completed.
- 7.4 At the same time prepare a series of standards in 50 ml Nessler tubes as follows:

ml of Standard Solution 1.0 ml = 0.001 mg NO_2-N	Conc., When Diluted to 50 ml, mg/l of NO ₂ -N
0.0 (Blank)	0.0
0.5	0.01
1.0	0.02
1.5	0.03
2.0	0.04
3.0	0.06
4.0	0.08
5.0	0.10
10.0	0.20

- 7.5 Add 2 ml of buffer-color reagent (6.2) to each standard and sample, mix and allow color to develop for at least 15 minutes. The color reaction medium should be between pH 1.5 and 2.0.
- 7.6 Read the color in the spectrophotometer at 540 nm against the blank and plot concentration of NO2-N against absorbance.


8. CALCULATION

- 8.1 Read the concentration of NO2-N directly from the curve.
- 8.2 If less than 50.0 ml of sample is taken, calculate mg/l as follows:

NO₂-N, mg/1 =
$$\frac{\text{mg/1 from standard curve x }50}{\text{m1 sample used}}$$

- 9. PRECISION AND ACCURACY
- 9.1 Precision and accuracy data are not available at this time.

Nitrate Test Spectrmic 20, Wave Length - 540 nm

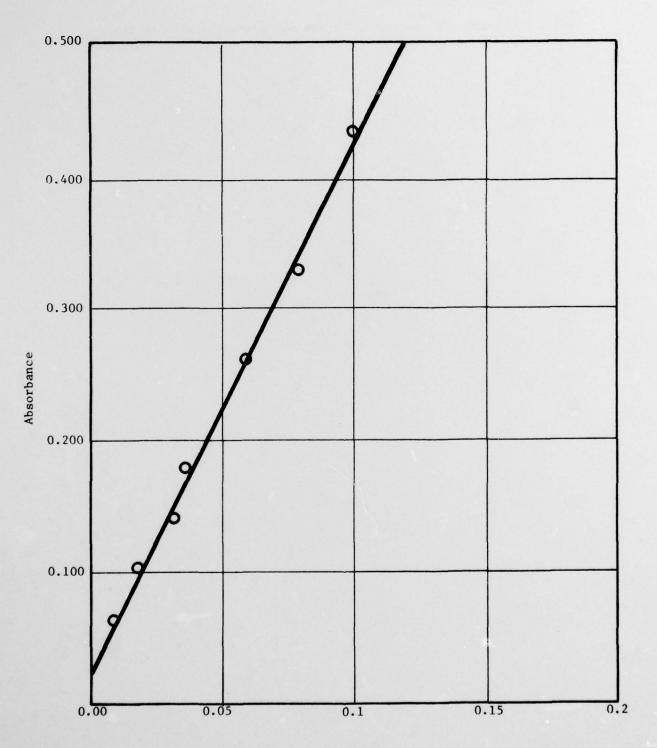

Concentration, mg/liter

DISTRIBUTION LIST

Commander

US Army Armament Research and Development Command

ATTN: DRDAR-LCE (15 cys)

DRDAR-TSS (5 cys)
DRDAR-LCM-E, R. Wolff

DRDAR-LCM-S, I. Forsten

Dover, NJ 07801

Commander

Naval Ammunition Depot ATTN: R. Klausmeir Crane, IN 47522

Commander

US Army Armament Materiel Readiness Command ATTN: DRSAR-RDM, G. Cowan

DRSAR-LEP-L Rock Island, IL 61299

Commander

Radford Army Ammunition Plant ATTN: W.T. Bolleter (15 cys) Radford, VA 24141

Commander

Naval Surface Weapons Center ATTN: T.N. Hall (4 cys) White Oak Laboratory Silver Spring, MD 20910

Commander

Naval Weapons Center ATTN: A.T. Nielsen (2 cys) China Lake, CA 93555

Commander

Naval Sea Systems Command ATTN: A. Amster, SEA-0332 Washington, DC 20300 Commander
Chemical Systems Laboratory
ATTN: A. Hilsmeier (2 cys)
L. Schiff
Aberdeen Proving Ground, MD 21010

Commander
Army Medical Bioengineering
R&D Laboratory
ATTN: D. Rosenblatt
Fort Detrick, MD 21701

Commander (3 cys)
Volunteer Army Ammunition Plant
Chattanooga, TN 37401

Commander (3 cys)
Joliet Army Ammunition Plant
Joliet, IL 60436

Commander
US Army Armament Materiel Readiness Command
ATTN: DRCPM-PBM
Dover, NJ 07801

Commander
US Army Research Office
ATTN: G. Wyman (2 cys)
P.O. Box 12211
Research Triangle Park, NC 27709

John Brown Associates ATTN: J. Brown P.O. Box 145 Berkeley Heights, NJ 07922

Defense Documentation Center (12 cys) Cameron Station Alexandria, VA 22314 Director
US Army TRADOC Systems Analysis Activity
ATTN: ATAA-SL (Tech Library)
White Sands Missile Range, NM 88002

Weapon System Concept Team/CSL ATTN: DRDAR-ACW Aberdeen Proving Ground, MD 21010

Technical Library ATTN: DRDAR-CLJ-L Aberdeen Proving Ground, MD 21005

Technical Library
ATTN: DRDAR-TSB-S
Aberdeen Proving Ground, MD 21010

Technical Library
ATTN: DRDAR-LCB-TL
Benet Weapons Laboratory
Watervliet, NY 12189